livingstone baths

INSTALLATION INSTRUCTIONS

⚠ WARNING

PLEASE READ ALL THESE INSTRUCTIONS CAREFULLY BEFORE BEGINNING. ENSURE THAT YOU HAVE ALL THE CORRECT COMPONENTS THAT YOU REQUIRE

Component A




Flexible Connector

Component B




Extended Waste

Component C





Shallow P-trap

1

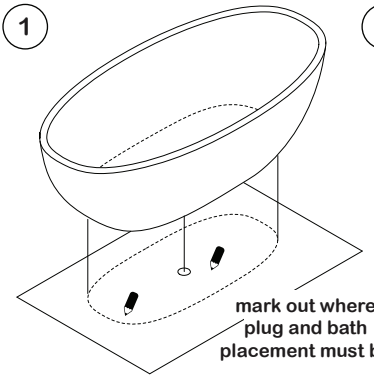


2

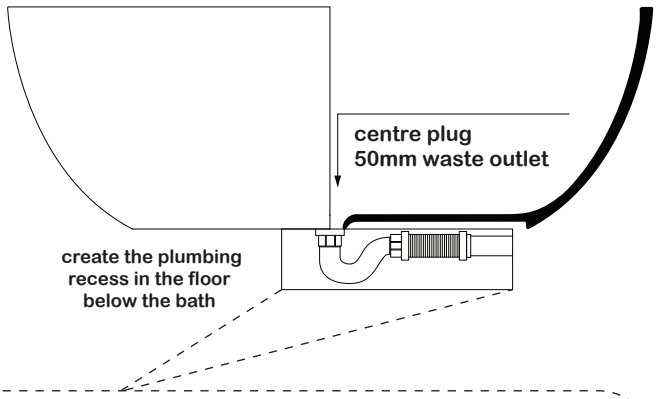

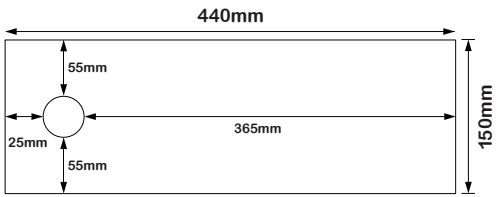


aerial view recess below bath

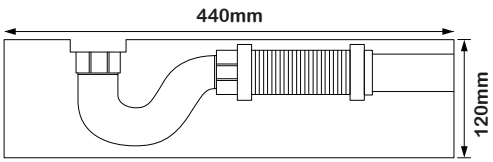


side elevation recess below bath

3

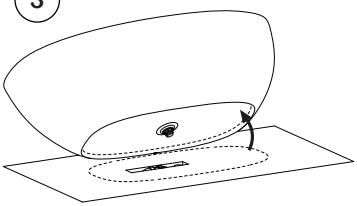


Once the waste has been inserted, place bath into position.

4

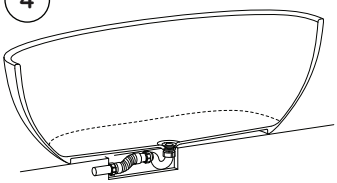

Connect P-trap to the waste.

5

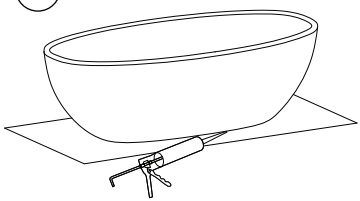

Once correctly connected, silicon the base of the bath to the tiles.