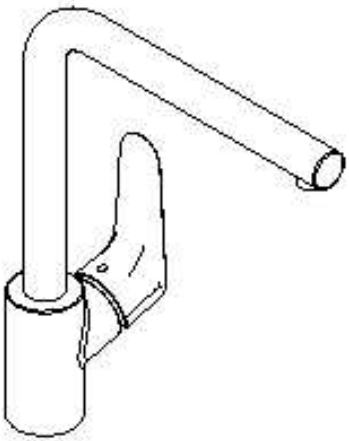
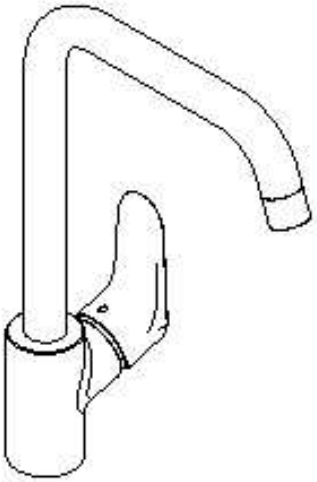
hansgrohe

EN Instructions for use / assembly instructions 2

DE Gebrauchsanleitung / Montageanleitung 3



Decor 280 1jet
31817XX3



Decor 260 1jet
31820XX3

Safety Notes

⚠ Gloves should be worn during installation to prevent crushing and cutting injuries.

⚠ The hot and cold supplies must be of equal pressures.

Installation Instructions

- Prior to installation, inspect the product for transport damages. After it has been installed, no transport or surface damage will be honoured.
- The pipes and the fixture must be installed, flushed and tested as per the applicable standards.
- The plumbing codes applicable in the respective countries must be observed.

Technical Data

Operating pressure:	max. 1 MPa
Recommended operating pressure:	0,1 - 0,5 MPa
Test pressure:	1,6 MPa
	(1 MPa = 10 bar = 147 PSI)
Hot water temperature:	max. 70°C
Recommended hot water temp.:	65°C
Thermal disinfection:	max. 70 °C / 4 min

The product is exclusively designed for drinking water!

Symbol description

Do not use silicone containing acetic acid!

Adjustment (see page 8)

To adjust the hot water limiter. Using a hot water limiter in combination with a continuous flow water heater is not recommended.

Dimensions (see page 10)

Flow diagram (see page 10)

Spare parts (see page 12)

XX - Colors
00 - Chrome Plated
14 - Brushed Bronze
31 - Brushed Redgold
34 - Brushed Black Chrome
67 - Matt Black
95 - Brushed Brass

Cleaning (see page 14)

Operation (see page 9)

Hansgrohe recommends not to use as drinking water the first half liter of water drawn in the morning or after a prolonged period of non-use.

Fault	Cause	Remedy
Insufficient water	· Aerator calcified, dirty	· Clean aerator, replace as necessary
Mixer stiff	· Cartridge defective, calcified	· Exchange cartridge
Mixer dripping	· Cartridge defective	· Exchange cartridge
Hot water temperature too low	· Hot water limiter incorrectly set	· Set hot water limiter
Water escaping in area of swivel spout	· O-ring defective	· Exchange O-ring
Water escaping at the threaded base	· connection hoses not completely screwed into basic body	· Tighten connection hoses by hand
	· Dirt or sedimentation on valve seat.	· Exchange O-ring

Assembly (see page 4)

⚠ Sicherheitshinweise

⚠ Bei der Montage müssen zur Vermeidung von Quetsch- und Schnittverletzungen Handschuhe getragen werden.

⚠ Große Druckunterschiede zwischen den Kalt- und Warmwasseranschlüssen müssen ausgeglichen werden.

Montagehinweise

- Vor der Montage muss das Produkt auf Transportschäden untersucht werden. Nach dem Einbau werden keine Transport- oder Oberflächenschäden anerkannt.
- Die Leitungen und die Armatur müssen nach den gültigen Normen montiert, gespült und geprüft werden.
- Die in den Ländern jeweils gültigen Installationsrichtlinien sind einzuhalten.

Technische Daten

Betriebsdruck:	max. 1 MPa
Empfohlener Betriebsdruck:	0,1 - 0,5 MPa
Prüfdruck:	1,6 MPa
	11 MPa = 10 bar = 147 PSI
Heißwassertemperatur:	max. 70°C
Empfohlene Heißwassertemperatur:	65°C
Thermische Desinfektion:	max. 70 °C / 4 min

Das Produkt ist ausschließlich für Trinkwasser konzipiert!

Symbolerklärung

Kein essigsäurehaltiges Silikon verwenden!

Justierung (siehe Seite 8)

Einstellen der Warmwasserbegrenzung. In Verbindung mit Durchlauferhitzern ist eine Warmwassersperre nicht zu empfehlen.

Maße (siehe Seite10)

Durchflussdiagramm (siehe Seite 10)

Servicateile (siehe Seite 12)

XX - Farbcodierung
00 - Chrom
14 - Brushed Bronze
31 - Brushed Redgold
34 - Brushed Black Chrome
67 - Mattschwarz
95 - Brushed Brass

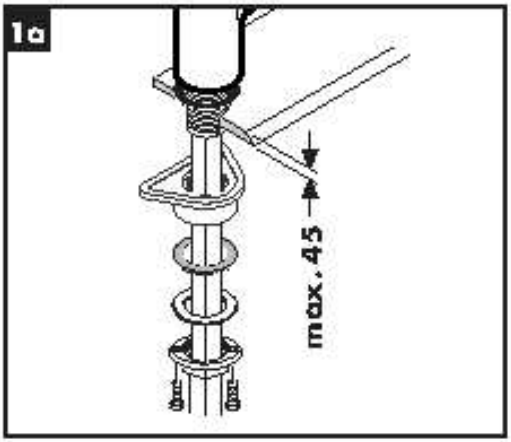
Reinigung (siehe Seite 14)

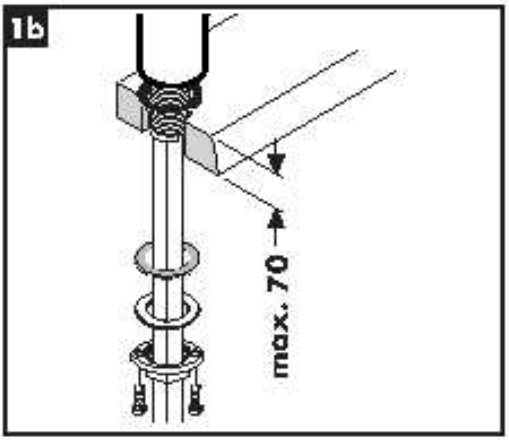
Bedienung (siehe Seite 9)

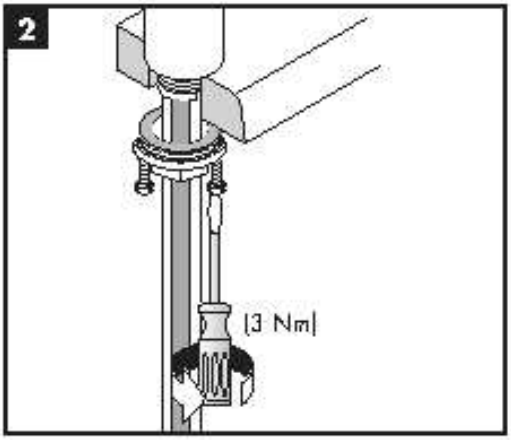
Hansgrohe empfiehlt, morgens oder nach längeren Stagnationszeiten den ersten halben Liter nicht als Trinkwasser zu verwenden.

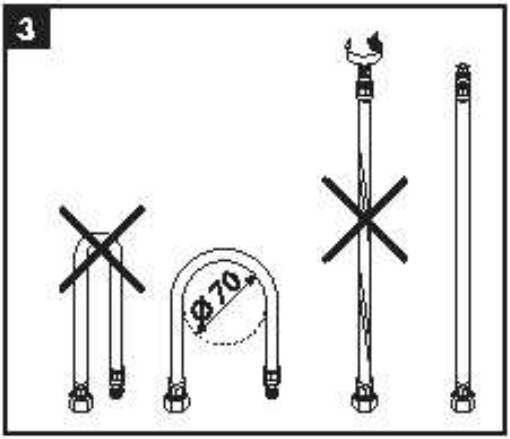
Störung	Ursache	Abhilfe
Wenig Wasser	· Luftsprudler verkalkt, verschmutzt	· Luftsprudler reinigen / austauschen
Armatur schwergängig	· Kartusche defekt, verkalkt	· Kartusche austauschen
Armatur tropft	· Kartusche defekt	· Kartusche austauschen
Zu niedrige Warmwassertemperatur	· Warmwasserbegrenzung falsch eingestellt	· Warmwasserbegrenzung einstellen
Wasseraustritt im Bereich des Schwenkauslaufes	· O-Ring defekt	· O-Ring austauschen
Wasseraustritt am Befestigungsschaft	· Anschlussschläuche nicht ganz in den Grundkörper eingeschraubt	· Anschlussschläuche von Hand festziehen
	· Schmutz oder Ablagerungen auf dem Dichtsitz	· O-Ring austauschen

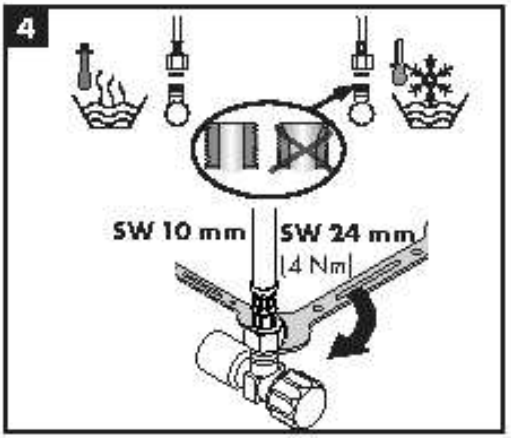
Montage (siehe Seite 4)

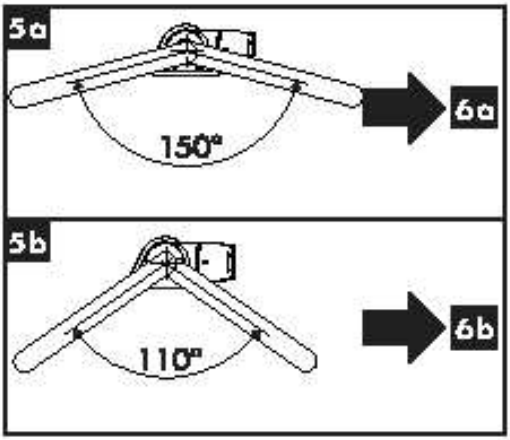

1a
max. 45

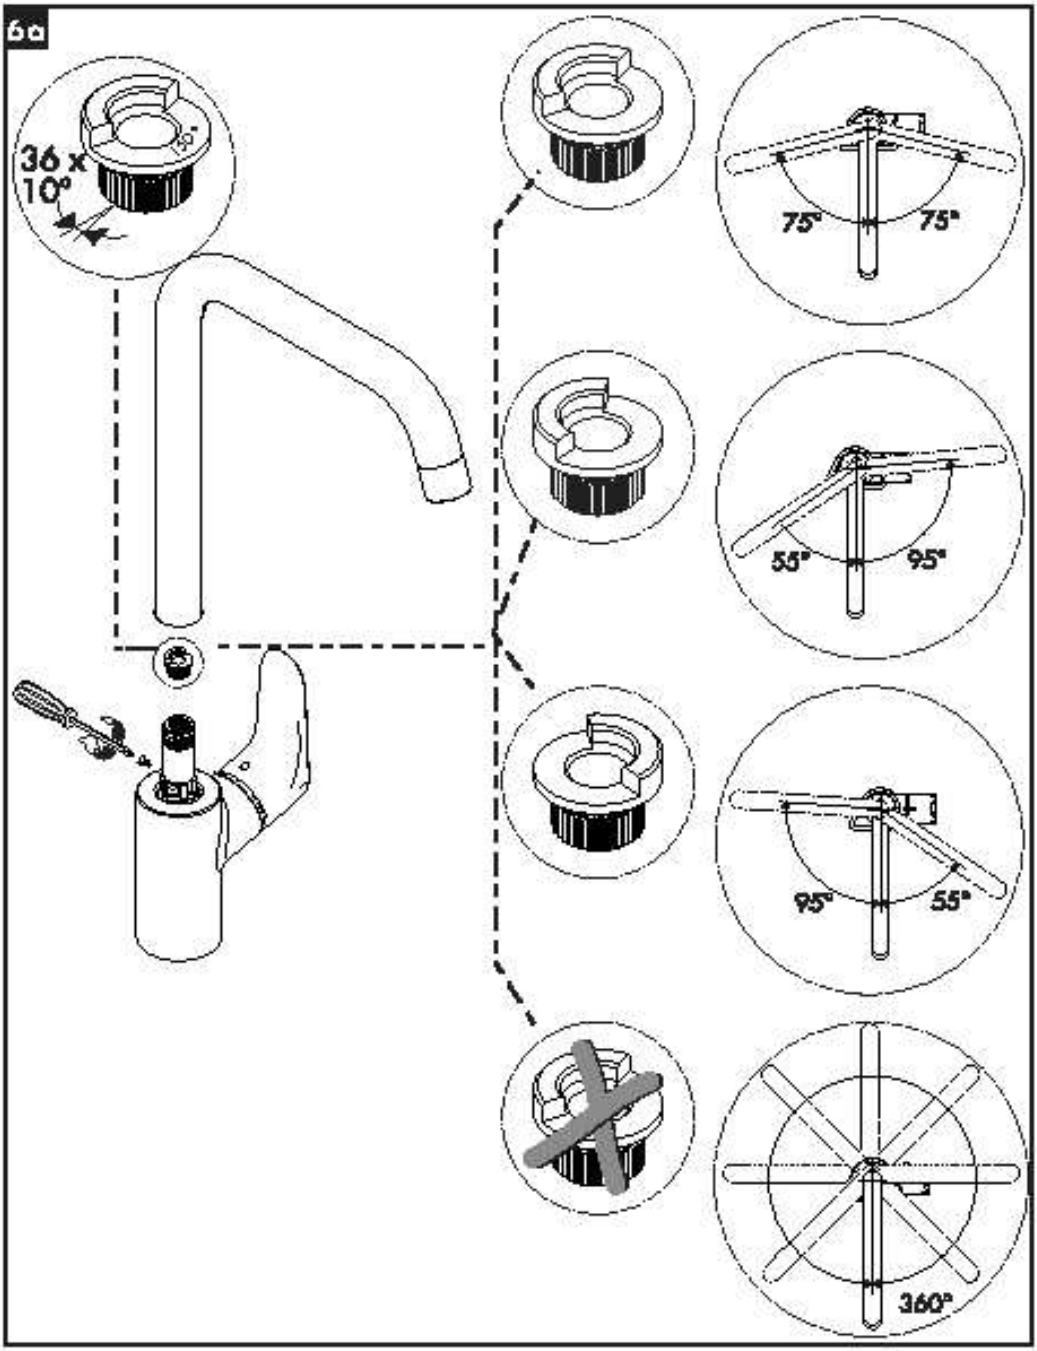

1b
max. 70

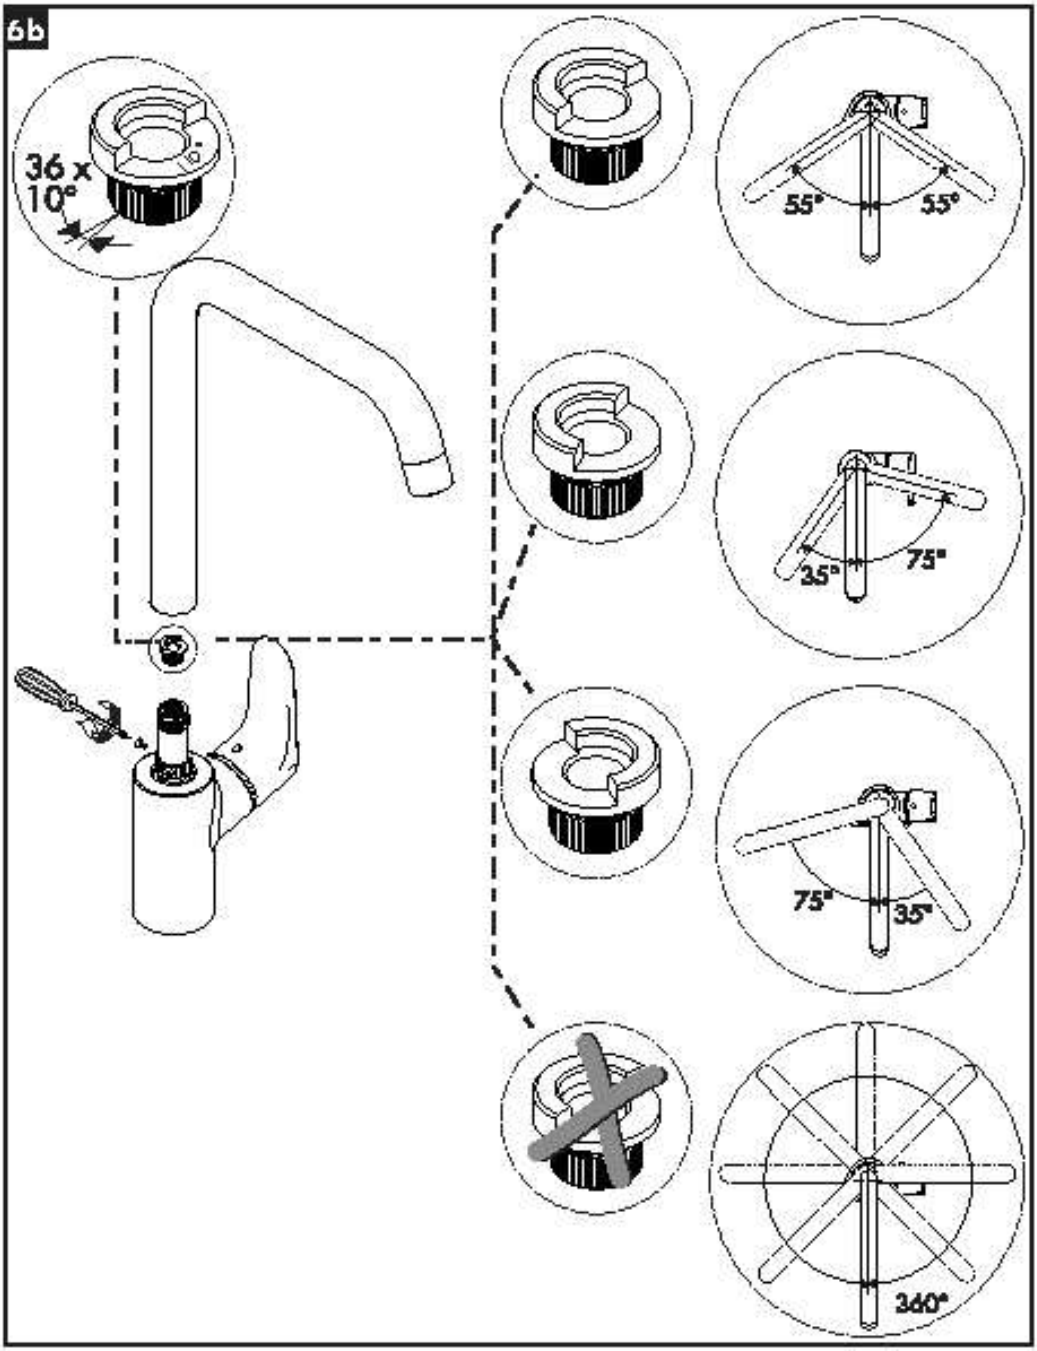

2
(3 Nm)

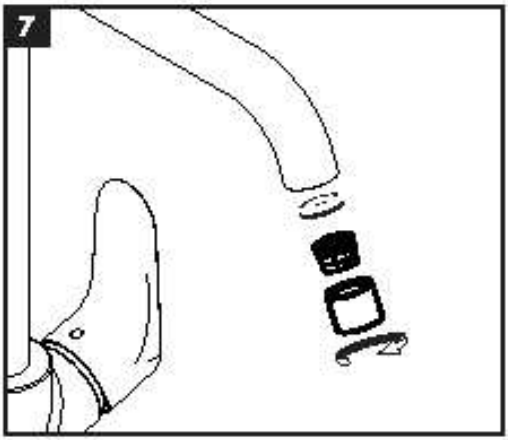

3
Ø70°

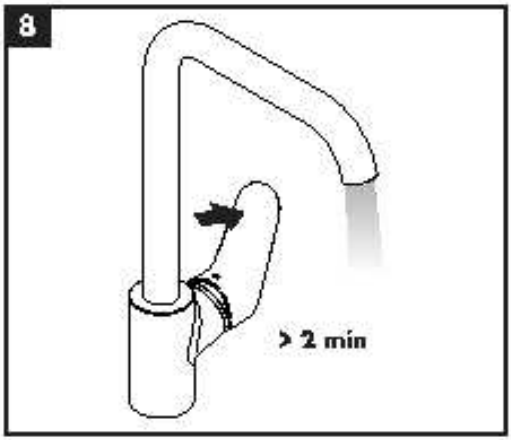

4
SW 10 mm
SW 24 mm
(4 Nm)

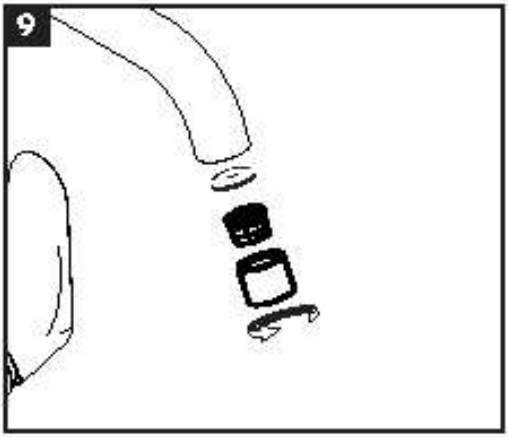

5a
150°
6a
5b
110°
6b


6a
36 x
10°
75°
75°
55°
95°
95°
55°
360°


6b
36 x
10°
55°
55°
35°
75°
75°
35°
360°


7

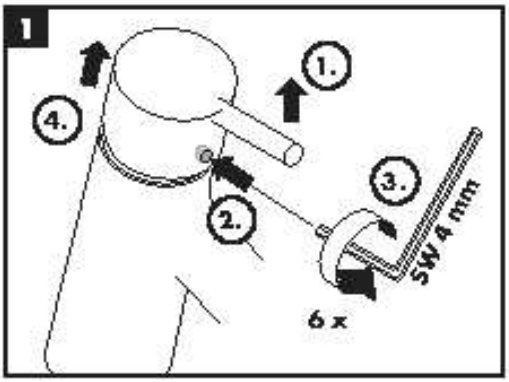

8
> 2 min

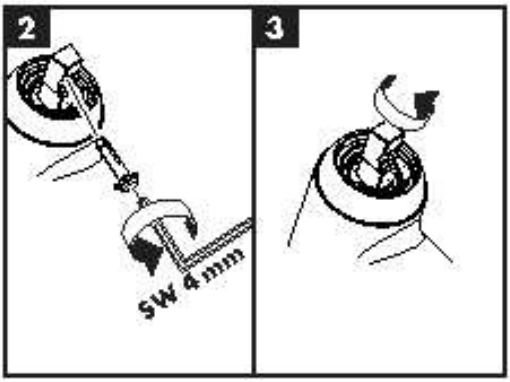

9

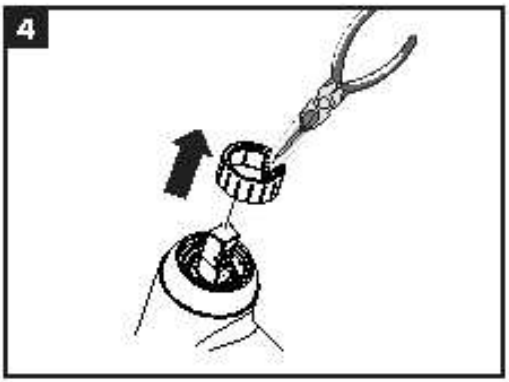

60 °C

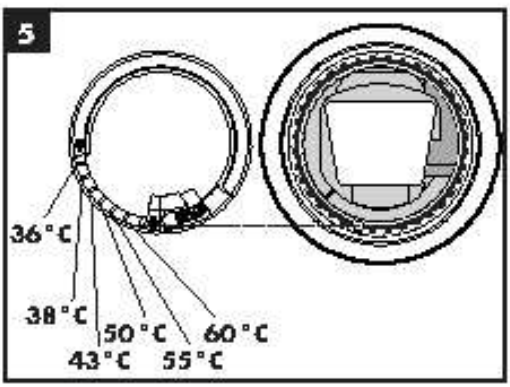

10 °C

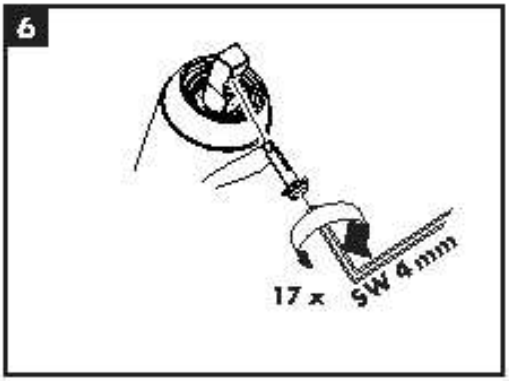

0,3 MPa

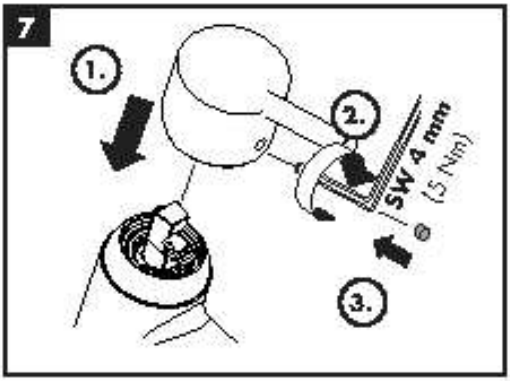

1
4.
1.
2.
3.
SW 4 mm
6 x

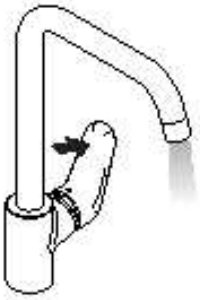

2
SW 4 mm
3


4

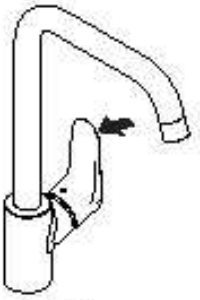

5
36 °C
38 °C
43 °C
50 °C
55 °C
60 °C


6
17 x
SW 4 mm


7
1.
2.
SW 4 mm
(5 Nm)
3.



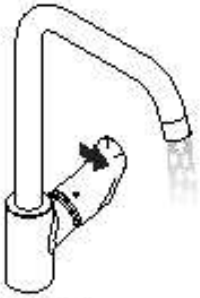
open / öffnen



close / schließen



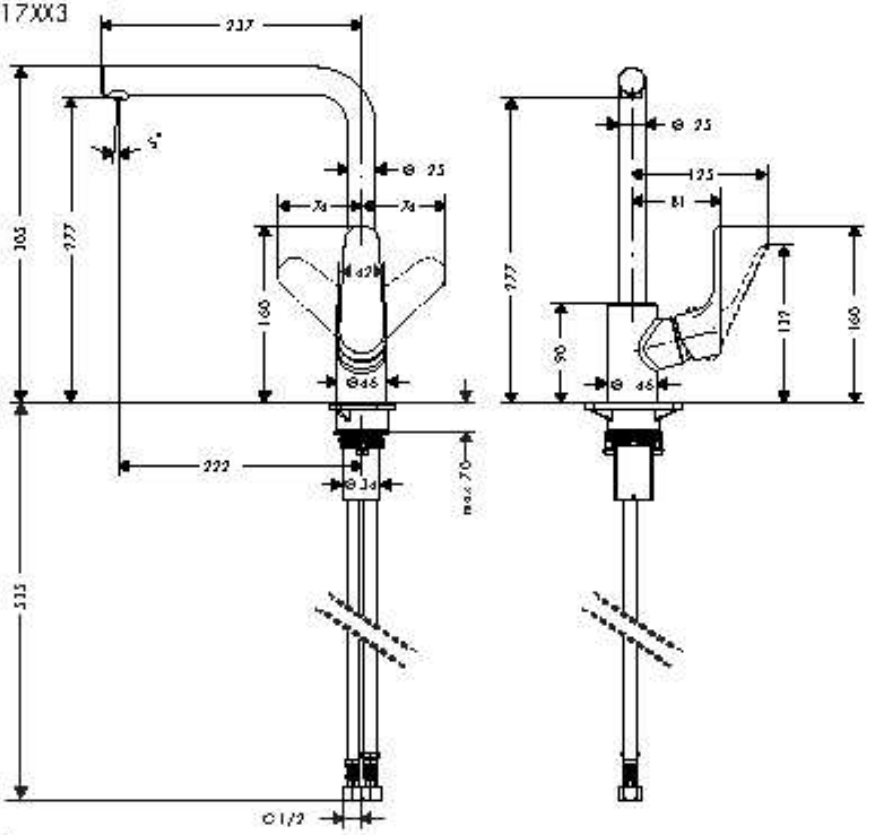
hot / warm

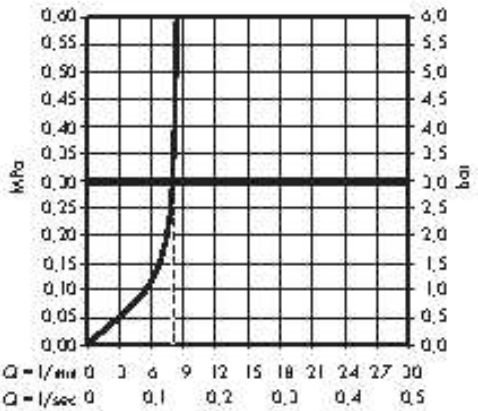


cold / kalt

Decor 280 1 jet

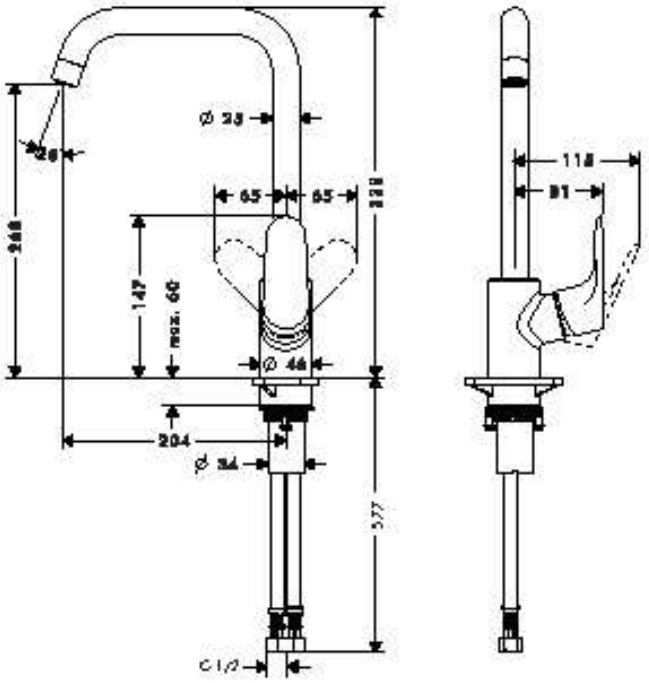
31817XX3

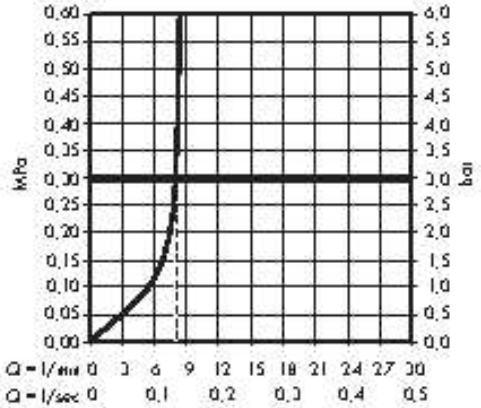




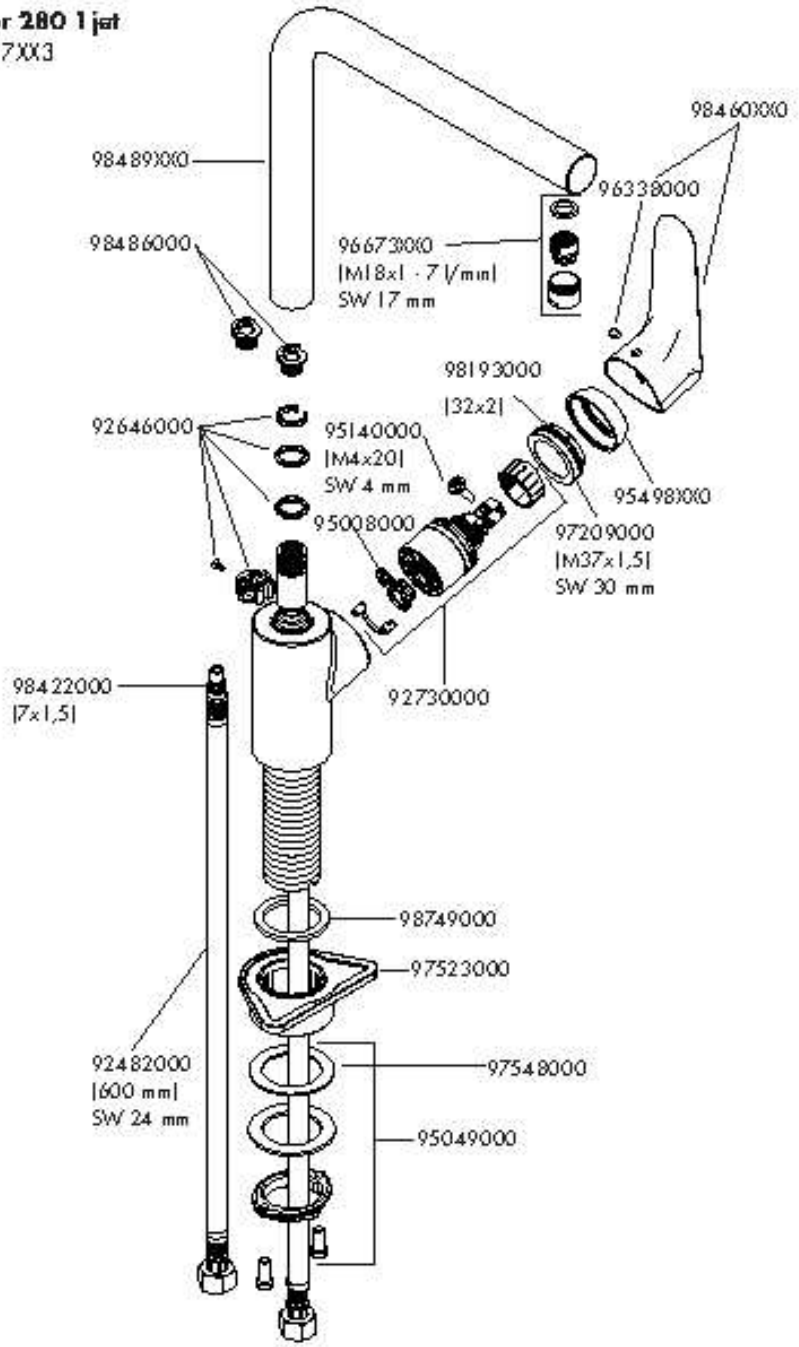
Decor 260 1 jet

31820XX3

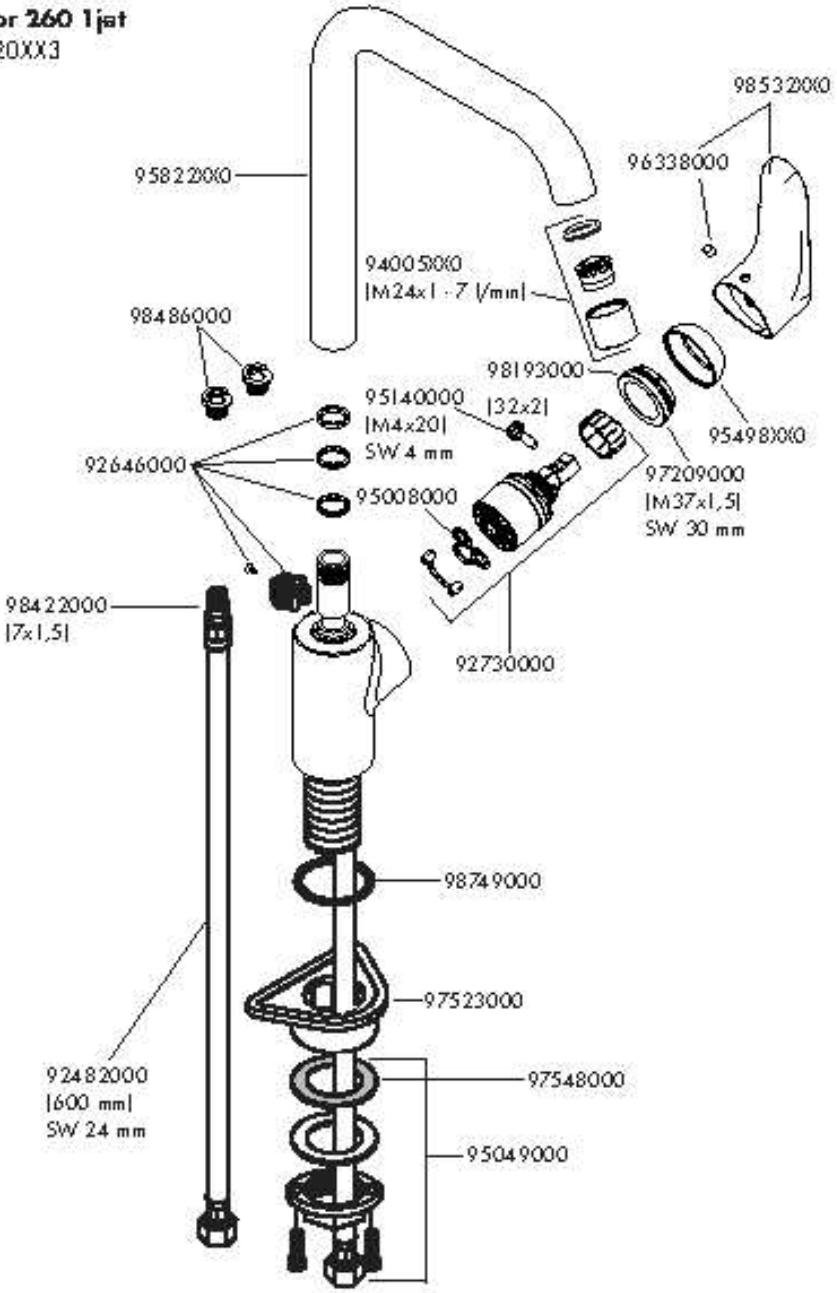




Decor 280 1 jet
31817XX3



Decor 260 1jet
31820XX3



EN Cleaning recommendation / Warranty / Contact

DE eingungsempfehlung / Garantie / Kontakt

www.hansgrohe.com/
cleaning-recommendation



www.hansgrohe.com/
cleaning-recommendation



www.hansgrohe.com/
cleaning-recommendation



www.hansgrohe.com/
cleaning-recommendation

hansgrohe

Hansgrohe · Auestraße 5 - 9 · D-77761 Schiltach · Telefon +49 (0) 7836/51-1212 · Telefax +49 (0) 7836/511440
E-Mail: info@hansgrohe.com · Internet: www.hansgrohe.com

07/2019
96330731